

CP-4 to DoorKing 9150 Control Panel

The CP-4 has 5 wires, **Red**, **Black**, **Blue**, **Yellow**, and **White**. You will only ever use 4 of these wires on a gate opener. **Red** and **Black** are for power and will always need to be connected to continuous power not switched.

The **White** wire is Common for the relay inside the CP-4, the **Blue** wire is the Normally Open side and **Yellow** is the Normally Closed side. Most domestic gate manufactures look for a short to ground to trigger the EXIT/OPEN function on the gate control board, so the **Blue** and **White** wires would be used to trigger. Some international gate manufactures look for an open from ground to trigger so you would use the **Yellow** and **White** wires to trigger.

