

CP4 to US Automatic “Patriot” Connection information:

“J2” Terminal Block:




“J2” Definitions:

Terminal	
1	+12 vdc Output <i>(Maximum current output 1.5 amp - 1500 milliamps)</i>
2	Common Ground Input -12 vdc
3	Push Button Input <i>(normally open contacts)</i> <i>(Push button, radio control, keypad, etc.)</i>
4	Open Safety Edge <i>(normally open contacts)</i> <i>(Stops gate when opening)</i>
5	Close Input <i>(normally open contacts)</i>
6	Contact Edge N/O connection monitored entrapment <i>DS2 switch 4 must be ON when monitored edge is connected or when</i> <i>*Secondary Entrapment Input is connected when in pre 2016 configuration</i>
7	Common Ground Input -12 vdc
8	Photo Eye N/C connection monitored entrapment <i>DS1 switch 8 must be on when monitored eye is connected</i> <i>*Not used in pre 2016 configuration</i>
9	Free Exit / Open Input <i>(normally open contacts)</i> <i>Loop input or any hold open input such as a 7-day timer, telephone access</i> <i>unit, or maintain contact switch (normally open contacts). These devices</i> <i>open the gate and will prevent the gate from closing if the contact is</i> <i>maintained. Once the contacts have been released, the gate can be closed</i> <i>with a closed signal device or the automatic close timer feature. Receiver</i> <i>relay2 pre-wired for latching open.</i>
10	Center Loop or Under Gate Loop Input <i>(normally open contacts)</i>
11	Safety Loop / Photo-eye / Reversing Edge Input used for vehicular protection devices. <i>(normally open contacts)</i>
12	Photo Eye Power +12 vdc output 1 amp max current <i>Only present when DS1 switch 10 is ON and gate is moving or DS1 switch 3 and 4 are</i> <i>OFF and DS1 switch 10 is ON used for installation.</i>



White to #2 or #7

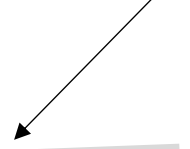

Yellow wire not used.

CP4 to US Automatic “Patriot” Connection information:

CP-4 5W Connections: (Wires colors were changed with CP-4)

- **Red** Wire to J2 Terminal #1 +12 VDC
- Black Wire to J2 Terminal #2 -12 VDC Ground
- **White** Wire to J2 Terminal (#2 or #7) -12 VDC Ground
- **Blue** Wire to J2 Terminal #9 Free Exit/Open Input
- **Yellow** Wire is not used.

If you short “J2” terminals #7 & #9 with a short piece of wire, this should trigger your gate to open. If this is not working the exit device will not open the gate.