

CP-4 To BFT Regil 6 Control Board

The open command will come from terminal 61 or 62 which are programmable. You will need to program them to open and enable timer to close. When they are shorted to the COM terminal the gate should open.

