


## CP-4 to E8 Arm Gate Motor

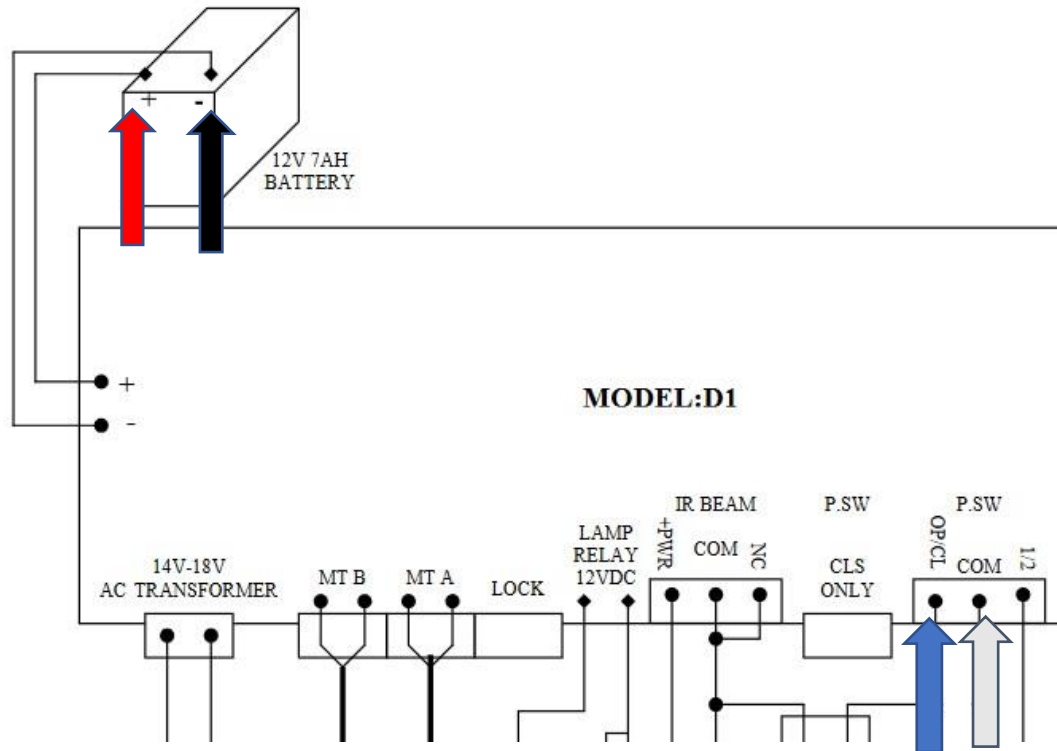

Red (+) and Black (-) are power and are connected directly to the battery.

Blue wire to OP/CL (Open/Close)

White wire to common (COM)

Yellow Wire is not used.