

# Aleko AC1400

**\*NOTE\*** If powering operator via solar panels, be sure to compensate for the 25mA standby current draw of the CW-INT

