


CP-4 to Door-King 4302

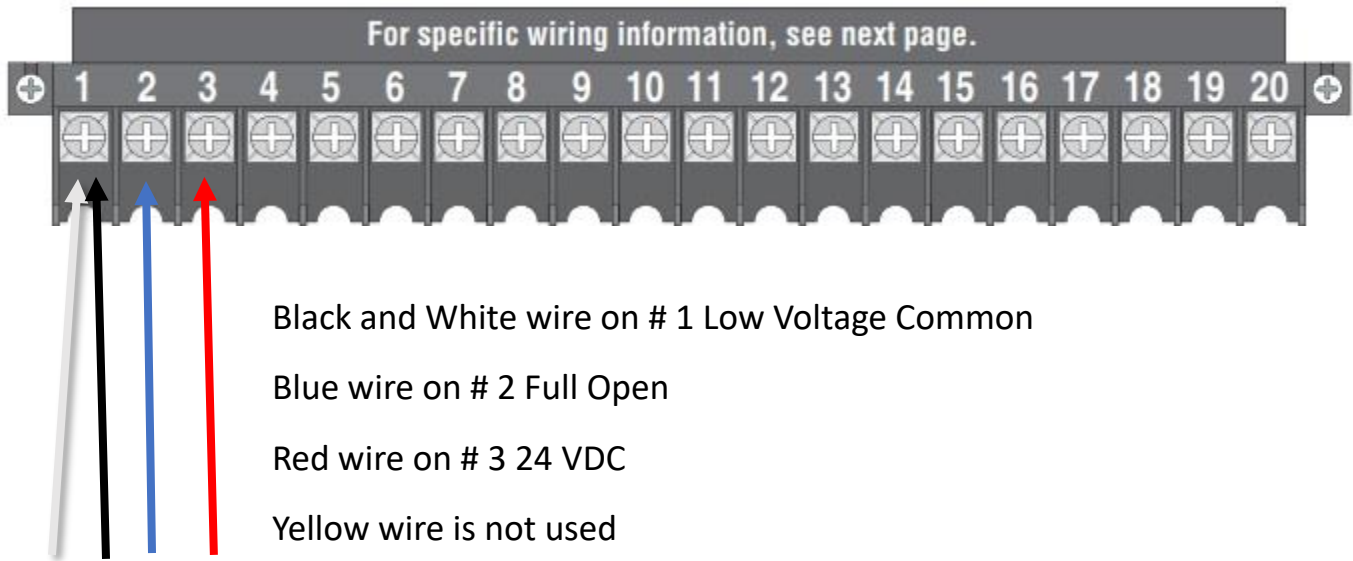

If the gate is closed this will trigger it to open

When the gate is open Switch 4 on the auto close timer block SW 1 will allow a trigger to re-set the auto close timer.